





BUBBLEMATE Foot spa

instruction manual



FB-55PB-GB

PRODUCT FEATURES:



INSTRUCTIONS FOR USE:

- 1. Ensure that the unit is unplugged before filling with water. Fill with warm water to the MAX fill line located on the inside of the tub.
- CAUTION: DO NOT FILL WATER OVER THE MAX FILL LINE NOTE: The foot spa will not heat cold water. For a warm water massage, fill the unit with warm water.
- Place the unit on the floor in front of a chair. It is recommended to place the product on a towel.
- 4. Plug the unit into a 220-240 AC power supply.
- 5. Sit down and place your feet in the spa.
- 6. To operate the unit, press the power button on the top of the product.
- 7. Enjoy a deep massage by sliding feet back and forth over the stimulating raised massage nodes on the footspa floor.
- 8. To turn off, press the button again to deactivate.
- To empty: First, unplug the unit. Tip the unit, allowing water to pour out along the rear corner of the footbath. DO NOT pour water over the power button.

NOTE: DO NOT hold or carry the unit by the removeable splash guard.

MAINTENANCE:

Cleaning

- Unplug the appliance and allow to cool before cleaning. Clean only with a soft, slightly damp sponge.
- Do not immerse in any liquid to clean.
- Never use abrasive cleaners, brushes, glass / furniture polish, paint thinner etc to clean.
- · Periodically straighten cord if it becomes twisted.

FKA Brands Ltd

Somerhill Business Park, Tonbridge, Kent TN11 0GP, UK Customer Support: +44(0) 1732 378557 | support@homedics.co.uk

Storage

Place the appliance in its box or in a safe, dry, cool place. DO NOT wrap the power cord around the appliance. DO NOT hang the unit by the cord.

PLUG: If the plug on this appliance is damaged, it can be replaced with a BS 1363 plug, fitted with a 3A BS 1362 fuse. The recommended fuse for this appliance is 3 amp. Care must å taken when changing the plug. If in doubt, contact a qualified electrician.



