






LUXURY Foot Spa

instruction manual



PRODUCT FEATURES:

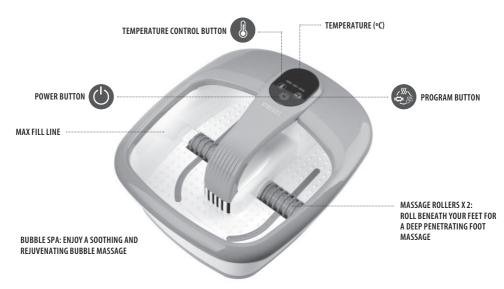

INSTRUCTIONS FOR USE:

- 1. Ensure that the unit is unplugged before filling with water. Fill with warm water to the MAX fill line located on the inside of the tub.
- 2. Place the unit on the floor in front of a chair. It is recommended to place the product on a towel.
- 3. Plug the unit into a 220-240 AC power supply.
- 4. Sit down and place your feet in the water. Do not stand in the unit.
- 5. To turn the unit on, press the power button (). The roller, heat and bubble function will start automatically.
- To select the temperature, press the temperature control button . Keep pressing to reach the desired temperature (between 35° to 42° degrees). Note: For best results always start with warm water in the footspa.
- 7. Select your desired program by pressing the program button 🕲 as follows:
- Roller 🕲 x 1 / Heat 🕲 x 2 / Bubbles 🥲 x 3 / Roller + Heat 🌚 x 4 / Heat + Bubbles 🧐 x 5 / Roller + Heat + Bubbles 🌚 x 6 8. To turn the footspa off, press the power button again.
- To empty: First, unplug the unit. Tip the unit, allowing water to pour out of the corner furthest from the control panel. DO NOT pour water over the control panel.

MAINTENANCE:

Cleaning

- Unplug the appliance and allow to cool before cleaning. Clean only with a soft, slightly damp sponge.
- Do not immerse in any liquid to clean.
- Never use abrasive cleaners, brushes, glass / furniture polish, paint thinner etc to clean.
- · Periodically straighten cord if it becomes twisted.

Storage

Place the appliance in its box or in a safe, dry, cool place. D0 NOT wrap the power cord around the appliance. D0 NOT hang the unit by the cord.

