

Homedics

SereneScent™
Flow Diffuser



Register your product today at
www.homedics.co.uk/product-registration

3 YEAR GUARANTEE

ARMH-671BG-WW

READ ALL INSTRUCTIONS BEFORE USE. SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

- This appliance is suitable for ages 8 and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- ALWAYS unplug the USB cable from the electrical outlet immediately before cleaning or replacing oil bottles. To turn off, press and hold .
- Do not place or store appliance where it can fall or be pulled into a bath or sink. Do not place in or drop into water or other liquid.
- DO NOT reach for an appliance that has fallen in water or other liquids.
- Keep dry – DO NOT operate in wet or moist conditions.
- Always place diffuser on a firm, flat, level surface.
- Always keep diffuser vertical when oil bottle has been installed to reduce likelihood of oil leaking and damaging the diffuser.
- DO NOT place the appliance near heat sources, such as a stove and do not expose the appliance to direct sunlight.
- Never use detergent to clean the appliance that is not recommended by the manufacturer.

- NEVER insert pins, metallic fasteners or objects into the appliance or any opening.
- Use this appliance for the intended use as described in this booklet. DO NOT use attachments not recommended by Homedics.
- DO NOT use outdoors.
- This product requires a 5VDC 1A USB power supply.
- NEVER operate the appliance if charging cable is damaged, if it is not working properly, if it has been dropped or damaged, dropped into water.
- DO NOT expose diffuser to fire or excessive temperatures. Exposure to fire or high temperatures may cause explosion.
- Keep cord away from heated surfaces.
- NEVER cover the product when it is in operation.
- DO NOT attempt to repair the appliance. There are no user serviceable parts. All servicing of this appliance must be performed at an authorised Homedics Service Centre.
- Never block the air openings of the appliance. Keep air openings free of lint, hair etc.
- This item should NEVER be used by any individual suffering from any physical or mental condition that would limit the user's capacity to use the product in a safe manner.
- If the product feels excessively hot while charging, switch off and

unplug the USB cable from the electrical outlet immediately and contact the Homedics Service Centre.

- This appliance is not intended for use in bathrooms, laundry areas, or similar moist indoor locations.
- This product is intended for household use only.
- This appliance contains batteries that are non-replaceable.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Failure to follow the above may result in the risk of fire or injury.

3 YEAR GUARANTEE

FKA Brands Ltd guarantees this product from defect in material and workmanship for a period of 3 years from the date of purchase, except as noted below. This FKA Brands Ltd product guarantee does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorised accessory; alteration to the product; or any other conditions whatsoever that are beyond the control of FKA Brands Ltd. This guarantee is effective only if the product is purchased and operated in the UK / EU. A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and / or authorised, or repair of products damaged by these modifications is not covered under this guarantee. FKA Brands Ltd shall not be responsible for any type of incidental, consequential or special damages.

To obtain guarantee service on your product, return the product post-paid to your local service centre along with your dated sales receipt (as proof of purchase). Upon receipt, FKA Brands Ltd will repair or replace, as appropriate, your product and return it to you, post-paid. Guarantee is solely through Homedics Service Centre. Service of this product by anyone other than the Homedics Service Centre voids the guarantee. This guarantee does not affect your statutory rights. For your local Homedics Service Centre, go to www.Homedics.co.uk/servicecentres

WEEE explanation

 This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Battery directive

 This symbol indicates that batteries must not be disposed of in the domestic waste as they contain substances which can be damaging to the environment and health. Please dispose of batteries in designated collection points.

Battery replacement


Your product includes a rechargeable battery designed to last the lifetime of the product. In the unlikely event that you should require a replacement battery, please contact Customer Services, who will supply details of the warranty and out-of-warranty replacement battery service.

PRODUCT FEATURES

Included in box:

- 1x Diffuser
- USB-C to USB-A cable

- 1x 10 ml essential oil
- 1x Dropper removal tool
- 1x 10ml empty bottle

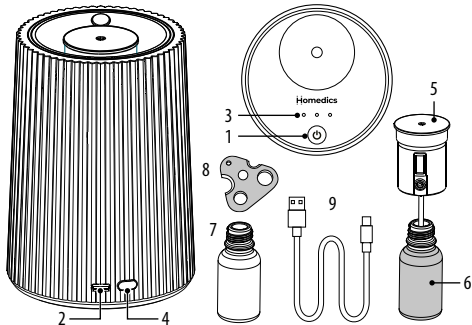

1. Power button
2. USB-C charging port
3. LED indicator lights & battery level indicators
4. Ambient light control button

5. Diffuser head
6. Essential oil bottle
7. Empty bottle
8. Dropper removal tool
9. USB-C to USB-A cable

HOW TO CHARGE


Plug the power cable into the USB-C input port on the diffuser and the USB-A end into a 5V 1A USB-A USB wall plug, wall plug adapter, computer, or power bank. Whilst charging the LED indicator will flash white, once fully charged the white LED indicator will turn solid.

LOW BATTERY WARNING

When the diffuser has less than 10% charge, the battery level indicator will flash red.

HOW TO INSTALL ESSENTIAL OIL BOTTLE

1. Carefully remove the plastic dropper insert from the oil bottle using the tool provided.
2. Lift up the diffuser head and unscrew the empty bottle from the diffuser. Screw in the full oil bottle and replace the diffuser head.
3. Place diffuser head with attached oil bottle back into the diffuser base.

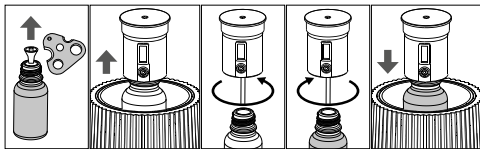

Please note:

- This diffuser will work with all 10ml essentials oil or blend bottles and most 15ml oil bottles.
- Always ensure the diffuser head seats down fully after installing the oil bottle. If the size of the bottle prevents the diffuser head from seating correctly, please carefully decant the oil into the spare 10ml bottle provided.
- Also ensure the diffuser is left in an upright position when an essential oil is attached to prevent any spillages.

HOW TO OPERATE

- Install your chosen oil (previous page) and place the diffuser upright on a firm flat surface out of reach of children and pets.
- Press and hold the power button (2s) to activate the diffuser. The oil will be diffused for 5 s followed by a 150 s pause before diffusing again. This mode ('Lo') is suitable for smaller rooms or a lighter fragrance.
- Press again (short press) to switch to 'Me' mode which will diffuse for 10 s with a 120 s pause. Suitable for small/large sized rooms or stronger fragrances.
- Press again (short press) to switch to 'Hi' mode which will diffuse for 10 s with a 60s pause. Suitable for larger spaces or a stronger fragrance.
- To activate the light function, press (3 – referenced above) button to cycle through 10 colour options, press 11 times for the breathing light function & one more time to turn the light function off.
- Press and hold the power button to switch the diffuser off.

Room coverage (m²)	20
Oil consumption (ml/hr)	Low mode: 0.05ml/hr Medium mode: 0.075ml/hr High mode: 0.2ml/hr
Battery capacity (mAh)	2000mAh
Run time from full charge (hrs/mins)	Up to 15 hours
Time to charge (hrs/mins)	4.5 hours

CLEANING AND MAINTENANCE

- Clean the outside of the unit with a soft, dry cloth as needed.
- **Periodically, clean the atomizing core as follows:** Fill the 10ml empty bottle included with the diffuser with isopropyl alcohol.
- Install isopropyl alcohol filled bottle to the diffuser and turn the diffuser on 'Lo' mode. Let it work for 30 minutes.
- Once complete, turn off the diffuser, unscrew the 10ml bottle and replace with your favourite essential oil fragrance bottle.

ESSENTIAL OILS AROUND PETS

Pet birds have very sensitive respiratory systems and use of essential oils in their environment is not recommended. Cats, dogs and small mammals such as hamsters may also be vulnerable, so we recommend keeping them out of the room if oils are being diffused and maintaining good ventilation. Always keep oil bottles and diffusers out of your pet's reach. If you do choose to diffuse essential oils around your pets, please research which are safe oils to use, depending on the type of pet.

Homedics

Distributed in the UK by

FKA Brands Ltd, Somerhill Business Park, Tonbridge, Kent TN11 0GP, UK

EU Importer

FKA Brands Ltd, 29 Earlsfort Terrace, Dublin D02AY28, Ireland

Customer Support: support@Homedics.co.uk

IB-ARMH671BG-0426-03

