

HOMEDICS®

✓ Register your product today at
www.homedicsgroup.com/register

Sleep Therapy Projection Clock Radio



Instruction Manual

SS-4520-GB

2 year
guarantee

READ ALL INSTRUCTIONS BEFORE USE.
SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

IMPORTANT SAFEGUARDS:

WHEN USING ELECTRICAL PRODUCTS, ESPECIALLY WHEN CHILDREN ARE PRESENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

- ALWAYS unplug the appliance from the electrical outlet immediately after using and before cleaning. To disconnect, turn all controls to the 'OFF' position, then remove plug from outlet.
 - NEVER leave an appliance unattended when plugged in. Unplug from the mains outlet when not in use and before putting on or taking off parts or attachments.
 - This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
 - DO NOT reach for an appliance that has fallen in water or other liquids. Switch off at the mains and unplug it immediately. Keep dry – DO NOT operate in wet or moist conditions.
 - NEVER insert pins or other metallic fasteners into the appliance.
 - Use this appliance for the intended use as described in this booklet. DO NOT use attachments not recommended by HoMedics.
 - NEVER operate the appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return it to the HoMedics Service Centre for examination and repair.
 - Keep cord away from heated surfaces.
 - Excessive use could lead to the product's excessive heating and shorter life. Should this occur, discontinue use and allow the unit to cool before operating.
 - NEVER drop or insert any object into any opening.
 - DO NOT operate where aerosol (spray) products are being used or where oxygen is being administered.
 - DO NOT operate under a blanket or pillow. Excessive heating can occur and cause fire, electrocution or injury to persons.
 - DO NOT carry this appliance by the cord or use cord as a handle.
 - DO NOT use outdoors.
 - This product requires a 220-240V AC power.
 - DO NOT attempt to repair the appliance. There are no user serviceable parts. For service, send to a HoMedics Service Centre. All servicing of this appliance must be performed by authorised HoMedics service personnel only.
 - Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch. Keep air openings free of lint, hair etc.
 - Do not place or store appliance where it can fall or be pulled into a bath or sink. Do not place in or drop into water or other liquid.
 - Only use the attachments/accessories specified by manufacturer.
- Power Supply unit Model name: SW005S050060K1; trademark: JIE; Input: 100-240 V, ~50/60 Hz, 0,2 A, Class II; Output: 5,0 V ---, 0,6 A.
- Rating label is on the base of the unit.
 - For power supply unit, the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
 - For power supply unit, the apparatus shall not be exposed to dripping or splashing and no filled containers shall be placed on the apparatus.

BATTERY PRECAUTIONS

- Use only the size and type of batteries specified.
- When installing batteries, observe proper +/- polarities. Incorrect installation of battery may cause damage to the unit.
- Do not mix old and new batteries.
- Clean the battery contacts and also those of the device prior to battery installation.
- Remove used batteries promptly.
- If the unit is not going to be used for a long period of time, remove batteries to prevent damage due to possible battery leakage.
- Do not dispose of batteries in fire. Batteries may explode or leak.
- Dispose of used batteries properly in accordance with all state, province and county regulations.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

CREATE YOUR PERFECT SLEEP ENVIRONMENT

Thank you for purchasing Sound Spa, the HoMedics acoustic relaxation machine. This, like the entire HoMedics product line, is built with high-quality craftsmanship to provide you years of dependable service. We hope that you will find it to be the finest product of its kind.

Sound Spa helps create your perfect sleep environment. Fall asleep to any of its eight calming sounds, then wake to nature sounds or alarm. Sound Spa can also mask distractions to improve your concentration while you read, work or study.

Sound Spa Clock Radio Features

- 8 Nature Sounds: rain, ocean, brook, white noise, thunderstorm, rainforest, fan, and campfire.
- Built-in projector to display time on ceiling, wall, or any flat surface
- Full function dual alarm with snooze and gradual wake
- Digital FM radio
- Enhanced LCD display
- Battery backup (Battery type CR-2032)

MAINTENANCE


To Store

You may leave the unit on display, or you can store it in its box in a cool, dry place.


To Clean

Wipe off dust with a damp cloth. NEVER use liquids or abrasive cleaner to clean. Modifications not authorized by the manufacturer may void users authority to operate this device.


Battery directive

 This symbol indicates that batteries must not be disposed of in the domestic waste as they contain substances which can be damaging to the environment and health. Please dispose of batteries in designated collection points.

WEEE explanation

 This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

PRODUCT FEATURES:

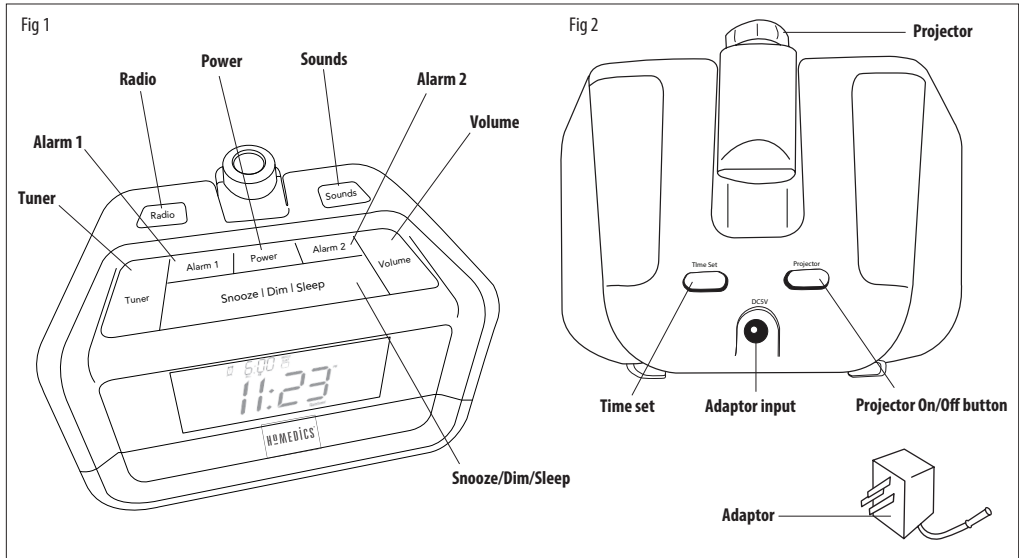

INSTRUCTIONS FOR USE:

1. Unpack the unit carefully. Remove all the accessories from the carton. Do not remove any labels or stickers on the bottom of the unit or adaptor. Before setting up the unit, verify that the following contents are present:

- Sound Spa Auto Set Clock Radio x 1
- AC Adapter and power cord x 1

Power Source

This unit is supplied with an AC adapter; take the following steps to connect the adaptor.

1. Unwind the power cord of the AC adaptor to its full length.
2. Connect the AC adaptor to the DC5V Input.
3. Plug the AC adaptor into an outlet (220V).
4. To power the unit off completely, unplug the AC adaptor from the wall outlet.

NOTE: Connecting this system to any other power source may cause damage to the system. For sufficient ventilation, keep other objects at least 4 inches away from the unit.

Setting Clock Time

Press and hold (3 seconds) the TIME SET button on back of unit (Fig. 2), the hour will begin to flash. Select the hour using the VOLUME buttons on the top to adjust the hour (when in 12 hour mode remember to set correct AM/PM, a "PM" icon will be displayed) (Fig. 1), press TIME SET button again to select the minute using the VOLUME buttons on top again to adjust. Press TIME SET button again, now time is set.

NOTE: After time is set, press TIME SET button again and use the VOLUME button to select 12 or 24 hour format.

Setting and Using the Alarms

Setting Alarm 1 or Alarm 2

1. Press and hold (3 seconds) the desired alarm button (ALARM 1 or ALARM 2) located on the top of the unit to activate the alarm set feature. (Fig. 1)
2. Press and hold the ALARM button again and the hour will begin flashing.
3. Use the TUNER button (or the volume up/down button) on top of the unit to adjust the hour, paying attention to the AM and PM indicators (when in 12 hour mode).
4. Press the ALARM button again and the minute will begin flashing. Use TUNER button again to adjust the minute.
5. Press the ALARM button again to select the source. The alarm can be set to

sound a Beep, Nature Sounds or play the FM radio. Select using the TUNER button.

6. Press ALARM button again to adjust the maximum volume of the gradual wake feature (alarm begins soft and slowly gets louder) by using the TUNER buttons to adjust the sound level up or down.
7. Press the ALARM button a final time, the alarm is now set.

Turning Off The Alarm / Snooze Operation

The Sound Spa is equipped with gradual wake, which means that the alarm begins soft and slowly gets louder. This will ensure a non-jarring wake-up.

- After the alarm sounds, press the SNOOZE bar located on the top of the unit and the alarm will sound again after nine minutes.

NOTE: You may only press the SNOOZE button during the ALARM mode for one hour (7 times). After the seventh time, the alarm will turn off and will not sound again until the next set time.

- To turn off the alarm, press any button (except the SNOOZE/DIM/SLEEP button) on the top of the unit.

Listening to the Radio

NOTE: For best reception, fully unwind the wire antenna. DO NOT strip, alter or attach to other antennas.

1. To listen to the radio, press the POWER button located on top of the unit.
2. Press the RADIO button on the unit until FM icon and station frequency appears on the display.
3. Use the TUNER selector button on the top of the unit to select desired station. For auto seek press and hold TUNER selector for 2 seconds then release and the tuner will find the next station with a signal.
4. Press the POWER button to turn radio off.

Sounds

1. To listen to the Nature Sounds, press the POWER button on the top of the unit.
2. Press the SOUND button to scroll through the sounds.
3. Your sound selection will illuminate on the LCD screen.

Sleep Feature

While listening to the radio press the SNOOZE/DIM/SLEEP button to activate the sleep feature. This allows you to set a sleep timer for 15, 30, 45, and 60 minutes. Once set, the unit will continue playing for the set length of time, then will automatically turn off.

Projector Function

The Sound Spa is equipped with a feature that allows you to project the TIME on any flat surface.

1. To turn projector on, press the PROJECTOR button on back of unit.
2. Carefully move the PROJECTOR device up or down to change where the image gets projected.
3. To adjust the focus, carefully turn the round end of the projector lens to the desired focus.
4. Press the PROJECTOR button to turn off.

Volume Control

To adjust the volume, use the VOLUME buttons located on the top of the unit.

Display Dimmer Control

Press the SNOOZE/DIM/SLEEP bar to adjust the backlight intensity of the clock display. The POWER selector button needs to be off to use the dimmer control.

Backup Battery

This alarm clock is equipped with a battery backup feature (1 CR-2032 battery included and already installed) to keep the clock time and alarm settings during power outage. The battery is located on the bottom of the unit for easy access (small Phillips head screw driver required, not included).

TWO YEAR GUARANTEE

HoMedics LLC. guarantees this product from defect in material and workmanship for a period of 2 years from the date of purchase, except as noted below. This HoMedics product guarantee does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorised accessory; alteration to the product; or any other CONDITIONS whatsoever that are beyond the control of HoMedics. This guarantee is effective only if the product is purchased and operated in the UK / EU. A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and / or authorised, or repair of products damaged by these modifications is not covered under this guarantee. HoMedics shall not be responsible for any type of incidental, consequential or special damages.

To obtain guarantee service on your product, return the product post-paid to your local service centre along with your dated sales receipt (as proof of purchase). Please refer to 'HoMedics Service Centre' information leaflet for details of your local service centre. Upon receipt, HoMedics will repair or replace, as appropriate, your product and return it to you, post-paid. Guarantee is solely through HoMedics Service Centre. Service of this product by anyone other than the HoMedics Service Centre voids the guarantee.

This guarantee does not affect your statutory rights.

HoMedics Service Centre

HoMedics Group Ltd,
HoMedics House,
Somerhill Business Park,
Five Oak Green Road,
Tonbridge,
Kent TN11 0GP, UK.

T +44 (0) 1732 360783
e support@homedics.co.uk
www.homedics.co.uk

